



# Assembly Instructions for 8 Gallon Oil lift Drain

**Parts List:** Funnel, aluminum tube, oil lift drain tank, (4) wheels, (16) 5/8" screws, (16) washers, restraining clamp, and wire screen


1. Slide base of funnel into aluminum tube.

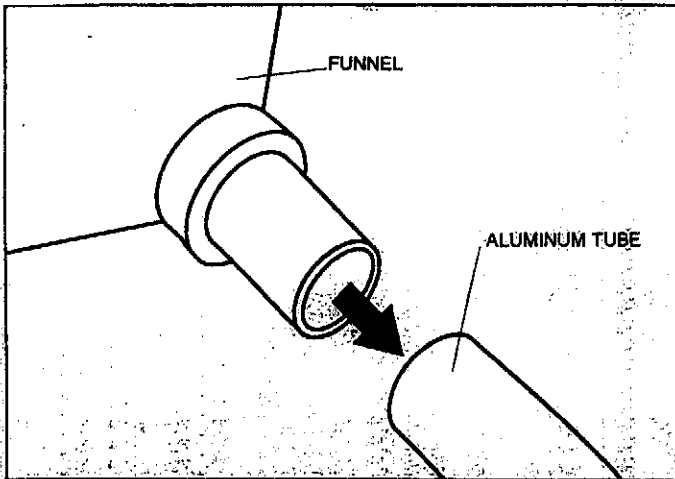

2. Attach the wheels to the bottom of the oil lift tank using the 5/8" screws and washers. Insert all the screws into the pre-drilled holes before tightening securely.

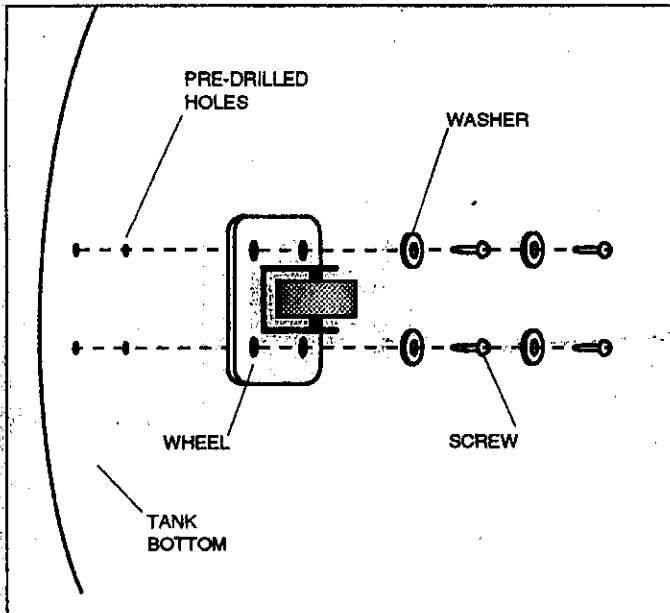

3. Slip restraining clamp over the neck of the tank. Clamp should be about 1" below the top of the neck.

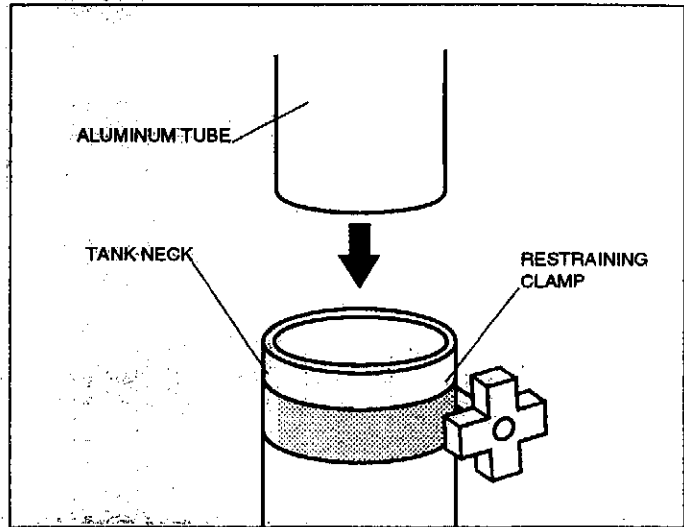

4. Take the funnel and tube assembly and insert the aluminum tube into the neck of the tank. Adjust the funnel to the desired height and tighten the clamp.

5. Place the wire screen over the opening inside the funnel.

**CAUTION !!**  
WHEN ASSEMBLING WHEELS  
MANUALLY INSTALL SCREWS  
**DO NOT USE**  
POWER SCREWDRIVER  
HAND SCREWDRIVER ONLY